


STAMPED TILE HORIZONTAL INSTALLATION: FROM LEFT TO RIGHT AND BOTTOM TO TOP

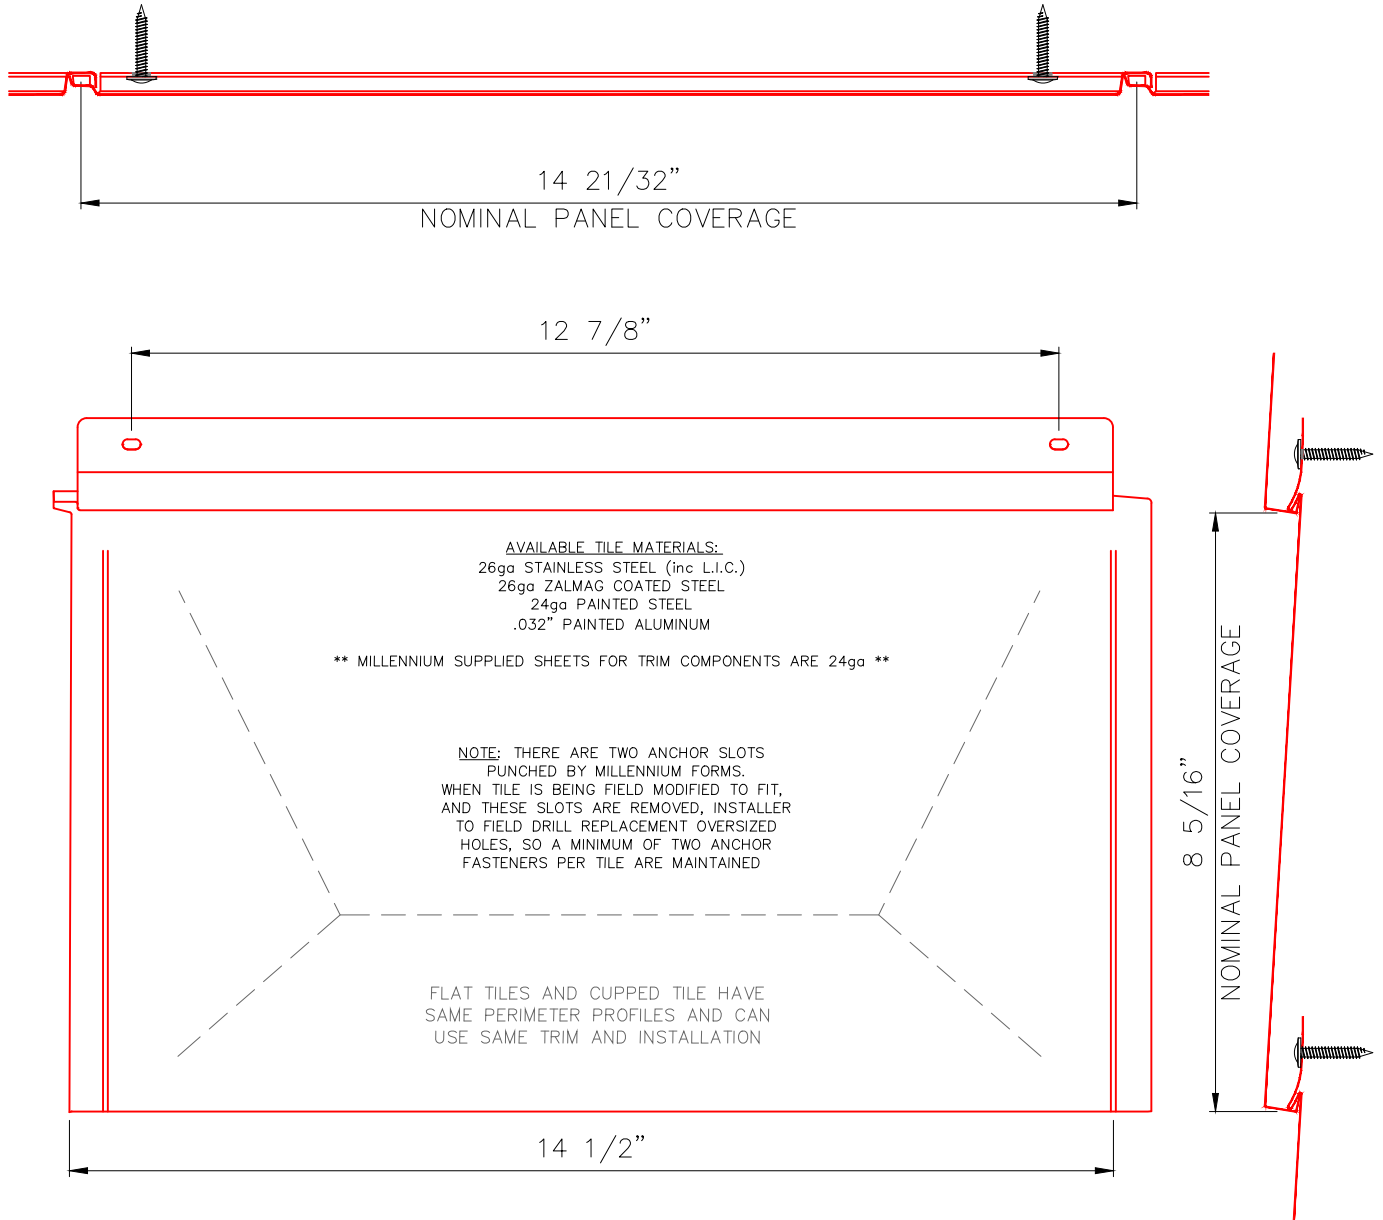


USE WAFER HEAD OR TRUSS HEAD  
#8 X 3/4" SHEET METAL SCREWS  
(NOT BY MILLENNIUM FORMS)  
DO NOT USE SELF-DRILLING  
SCREWS WITH PLYWOOD

IF LESS THAN 2" OF TRIMMED TILE  
REMAINS, THEN ALSO ADHERE TO  
ADJACENT TILE. ADHESIVE  
COMPATIBILITY WITH TILE FINISH TO  
BE CONFIRMED PER PROJECT

DETAILS ARE THE SAME FOR STAINLESS  
STEEL, PAINTED STEEL, ZALMAG COATED  
STEEL AND ALUMINUM TILES;  
FASTENER MATERIAL MUST BE  
COMPATIBLE WITH TILE FINISH




**STANDARD TILE PROFILE**  
STAMPED TILE (3/4 Scale)

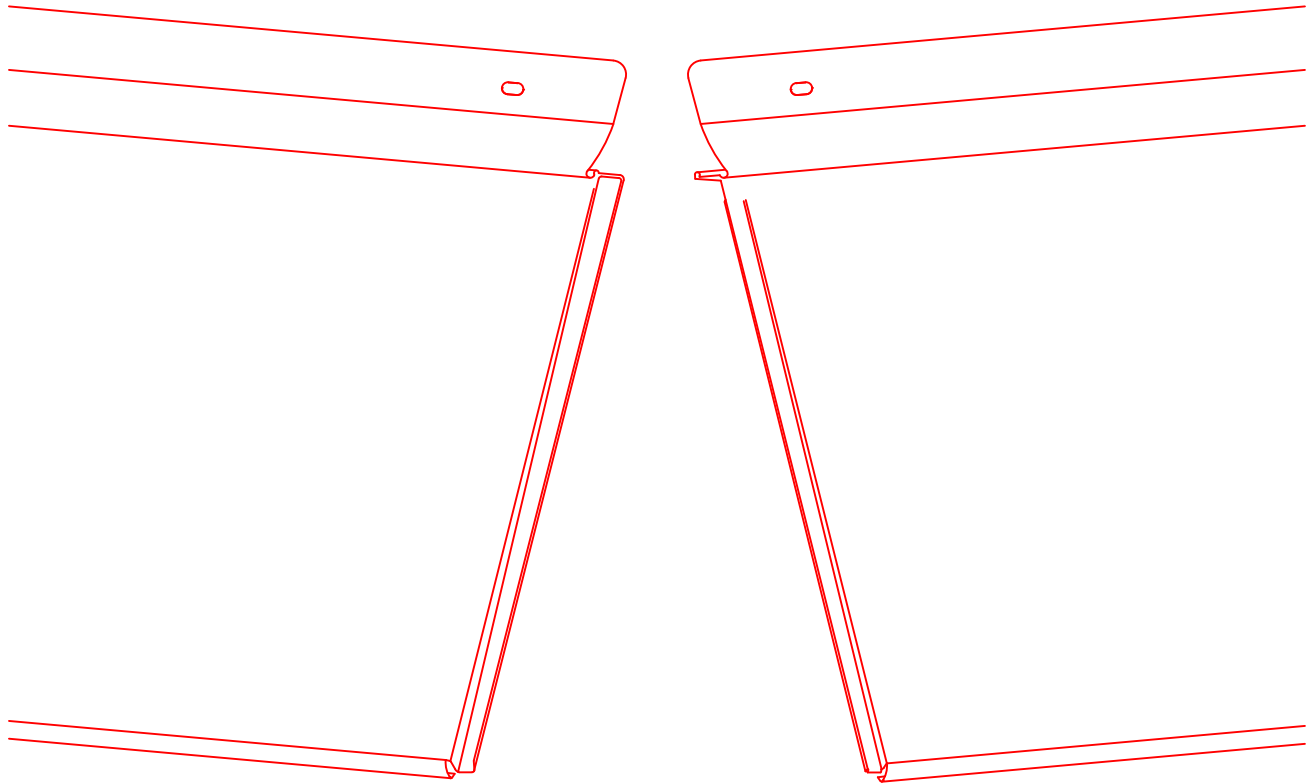

2

VERTICAL STACK JOINT  
STAMPED TILE (No Scale)


---

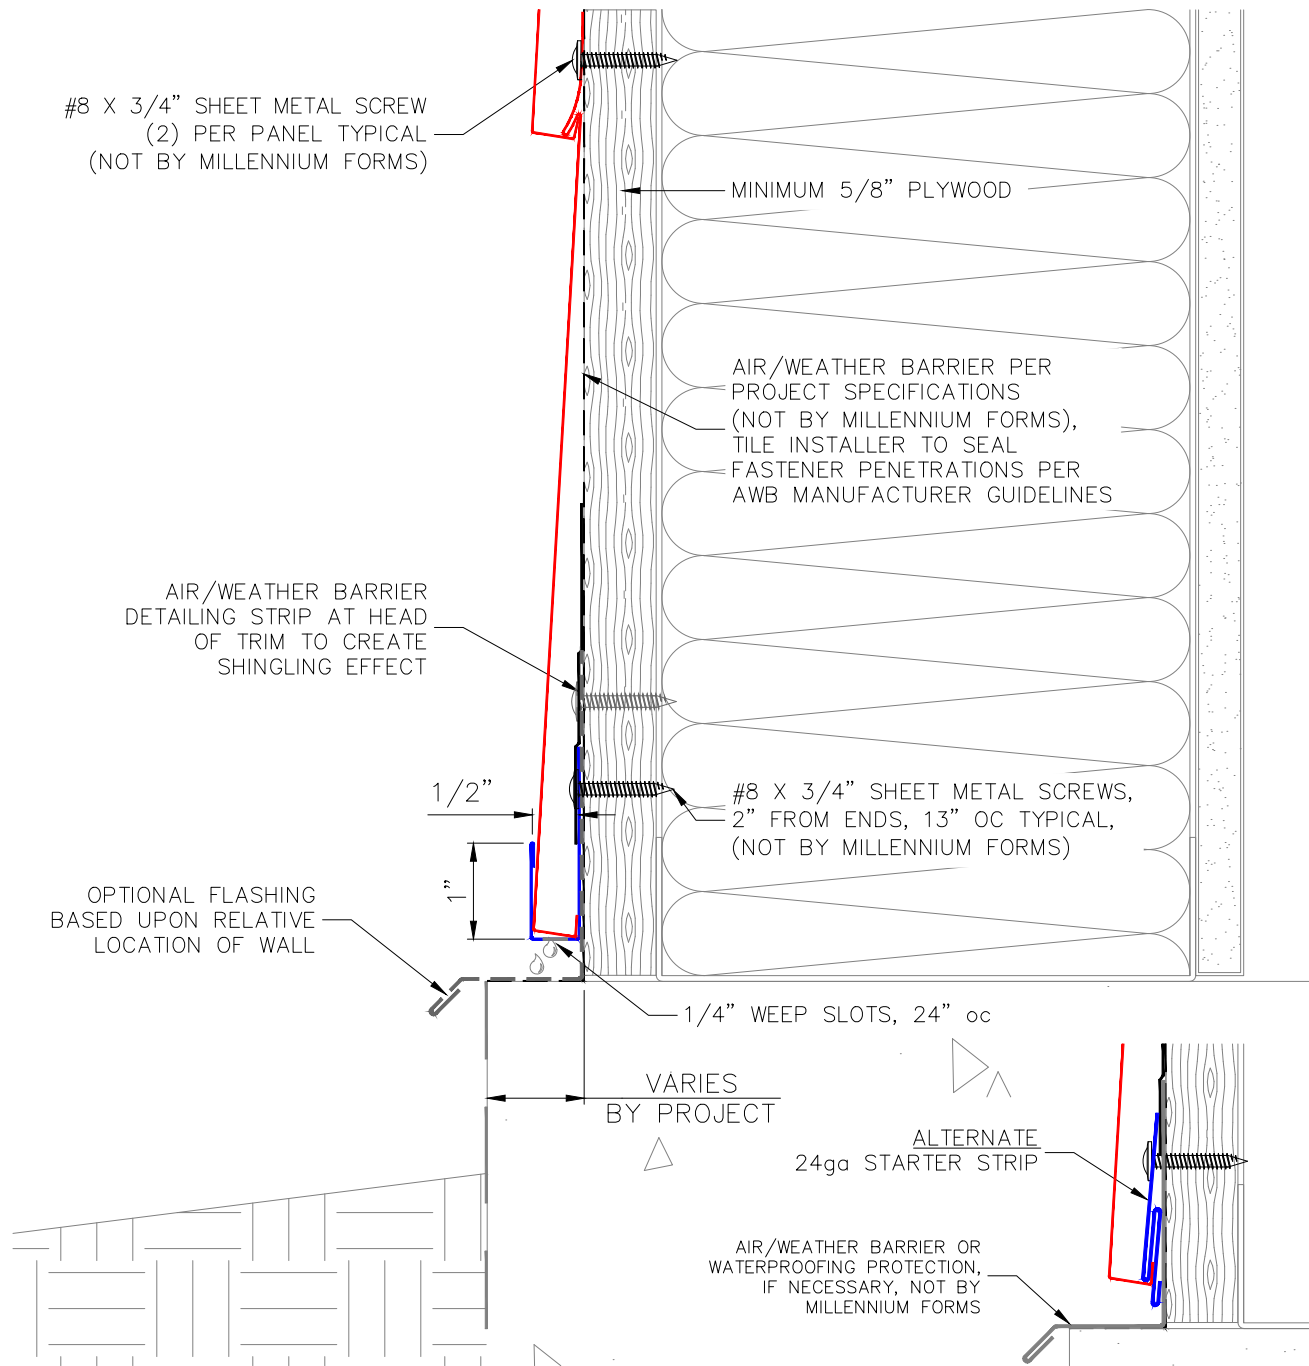

3

WALL SILL TRIM


STAMPED TILE - HORIZONTALLY ON PLYWOOD

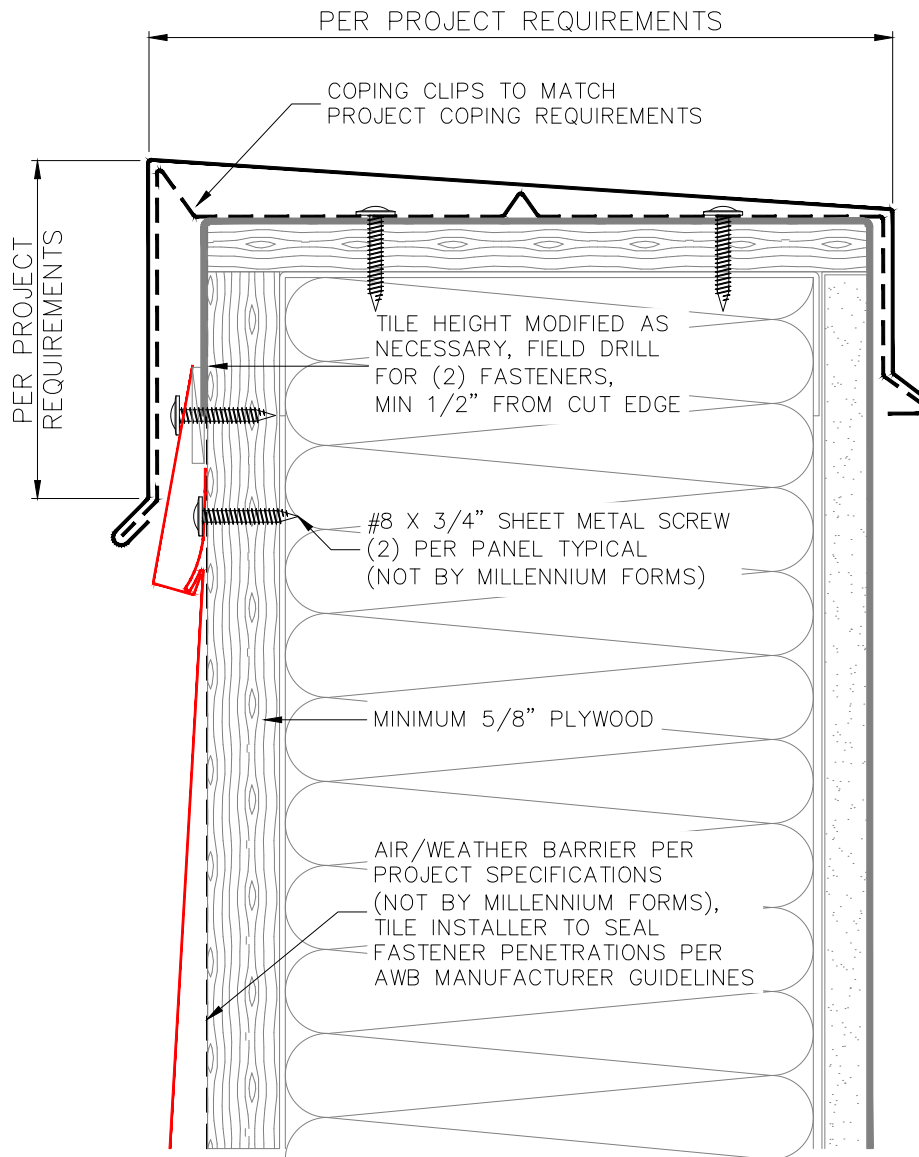

4

HEAD TRIM @ COPING


STAMPED TILE - HORIZONTALLY ON PLYWOOD

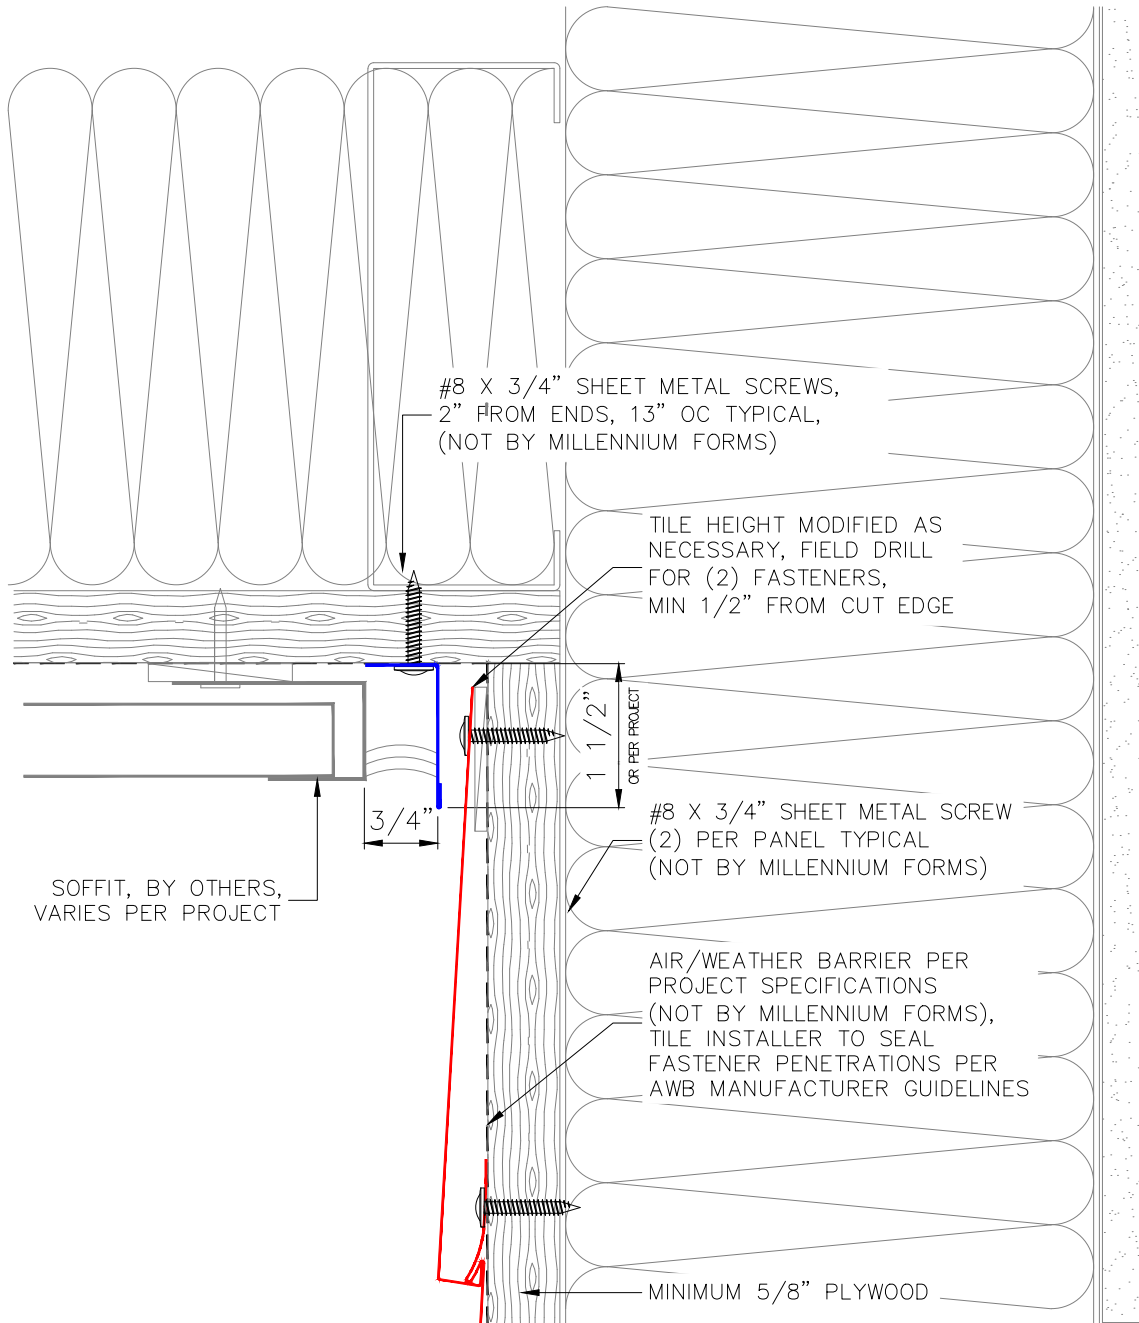


5

HEAD TRIM @ SOFFIT

STAMPED TILE - HORIZONTALLY ON PLYWOOD

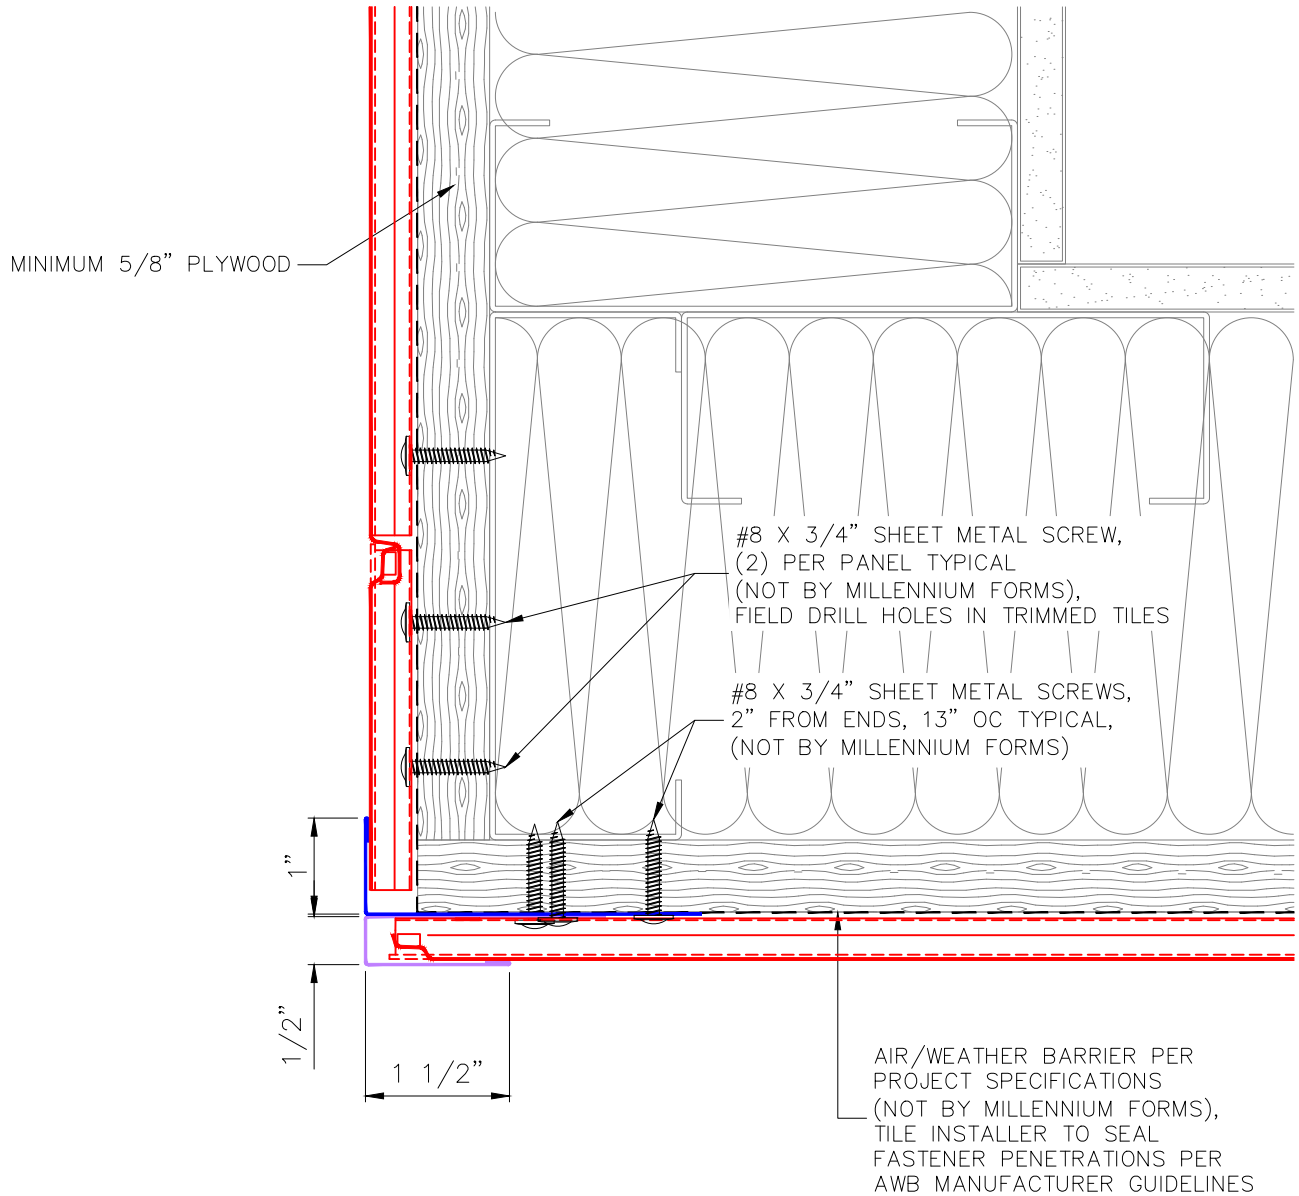


OUTSIDE CORNER TRIM  
STAMPED TILE - HORIZONTALLY ON PLYWOOD

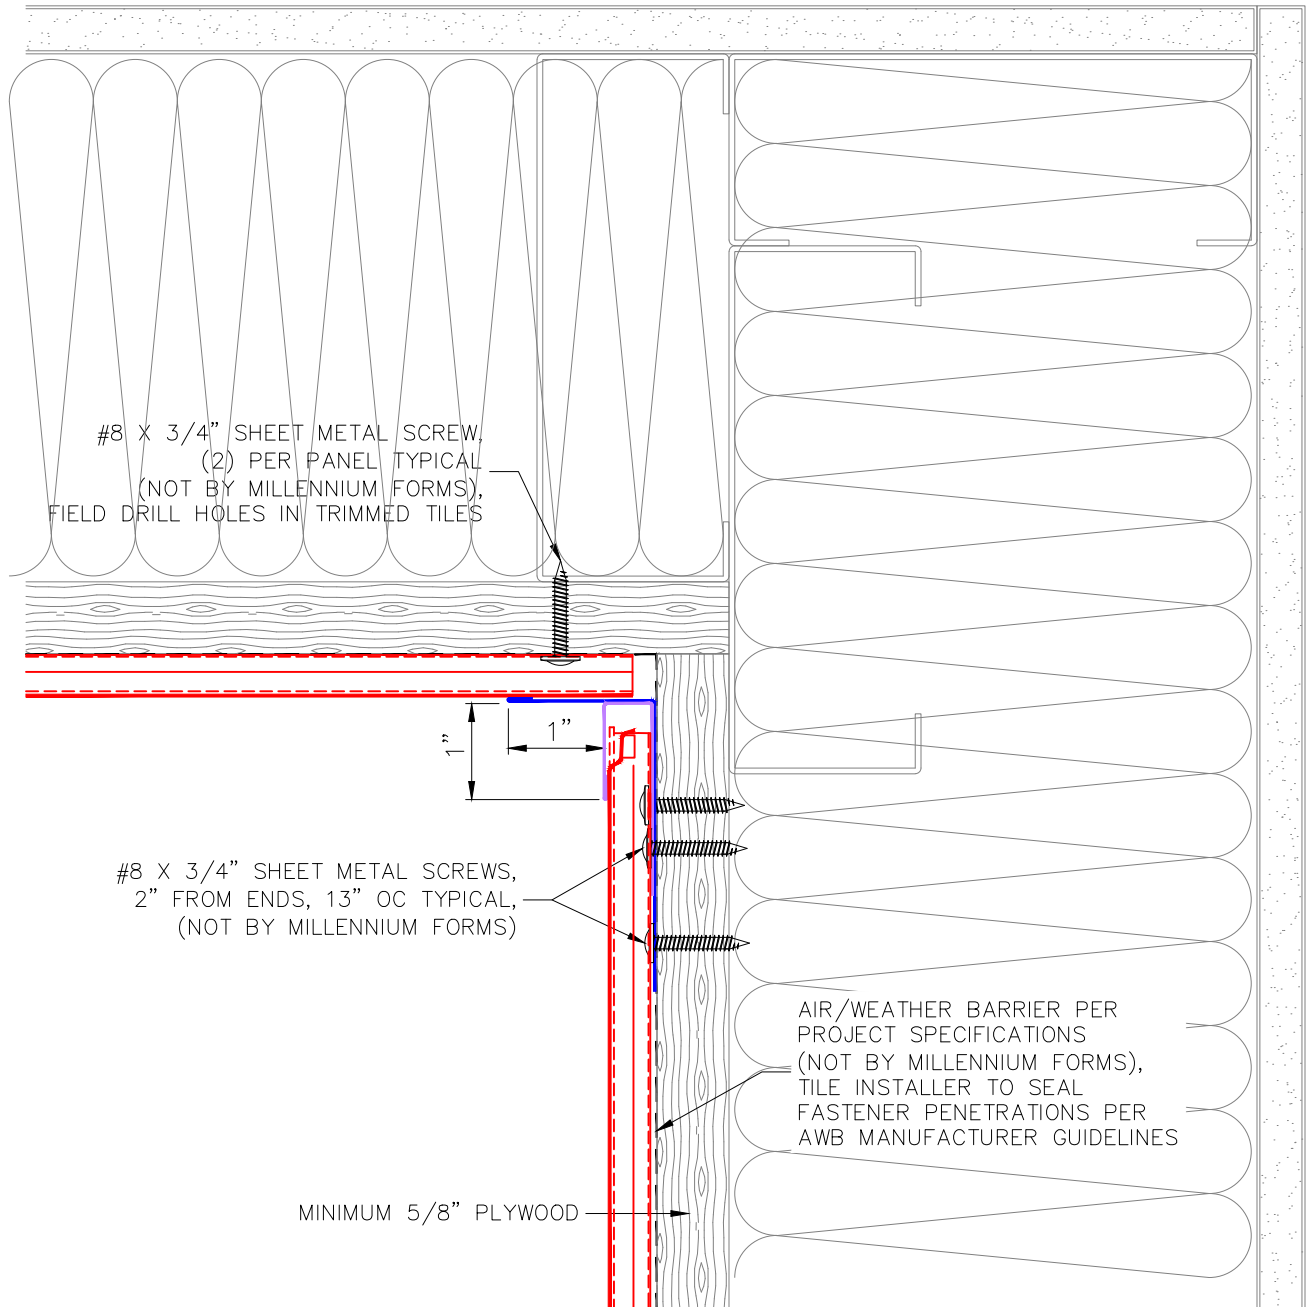

7

INSIDE CORNER TRIM


STAMPED TILE - HORIZONTALLY ON PLYWOOD

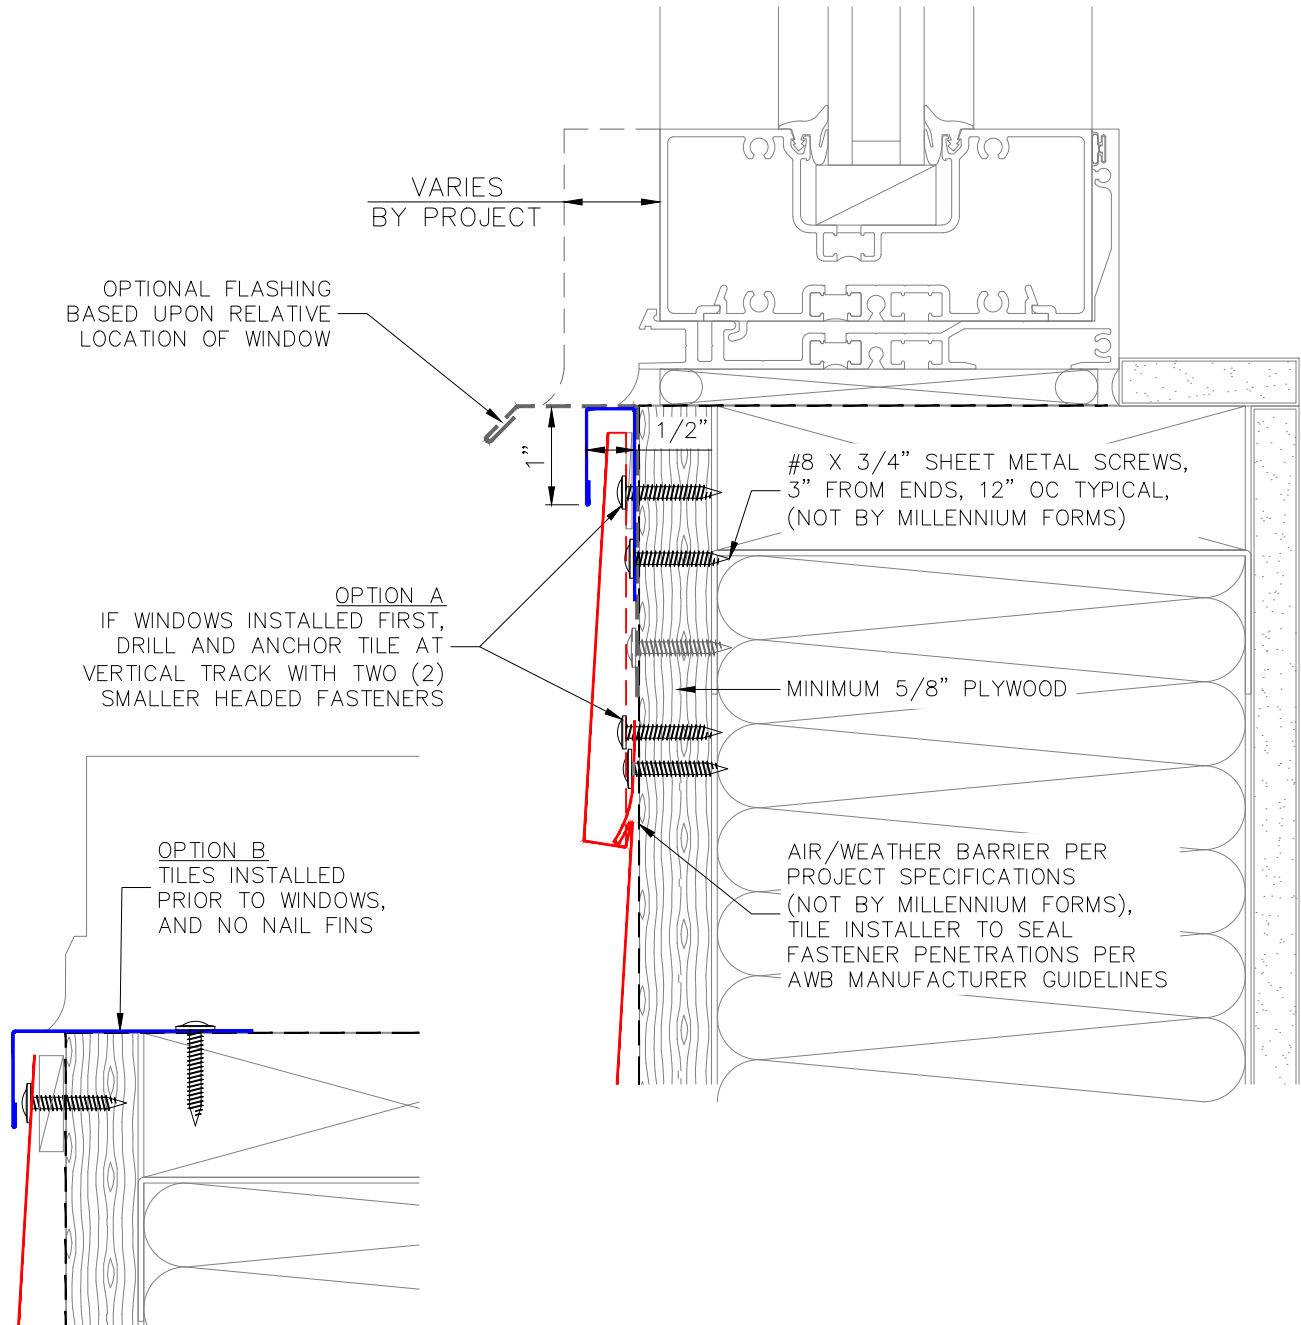

8

WINDOW SILL TRIM


STAMPED TILE - HORIZONTALLY ON PLYWOOD

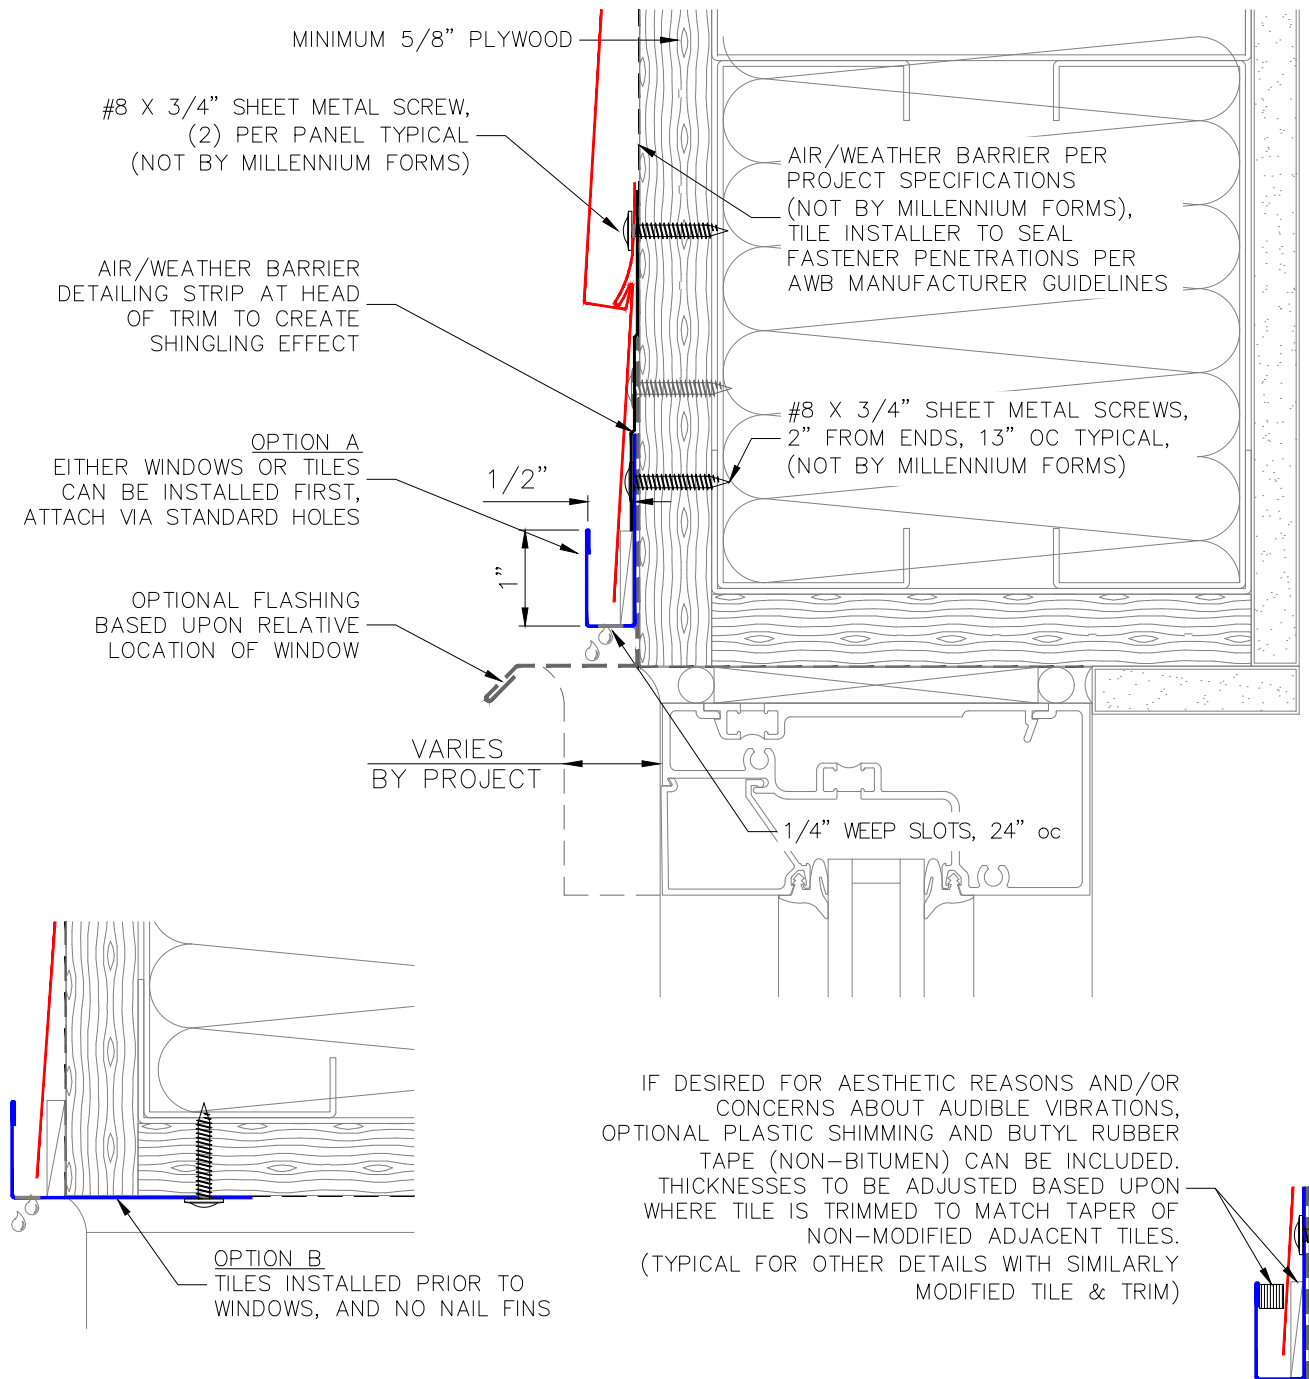

9

WINDOW HEAD TRIM


STAMPED TILE - HORIZONTALLY ON PLYWOOD

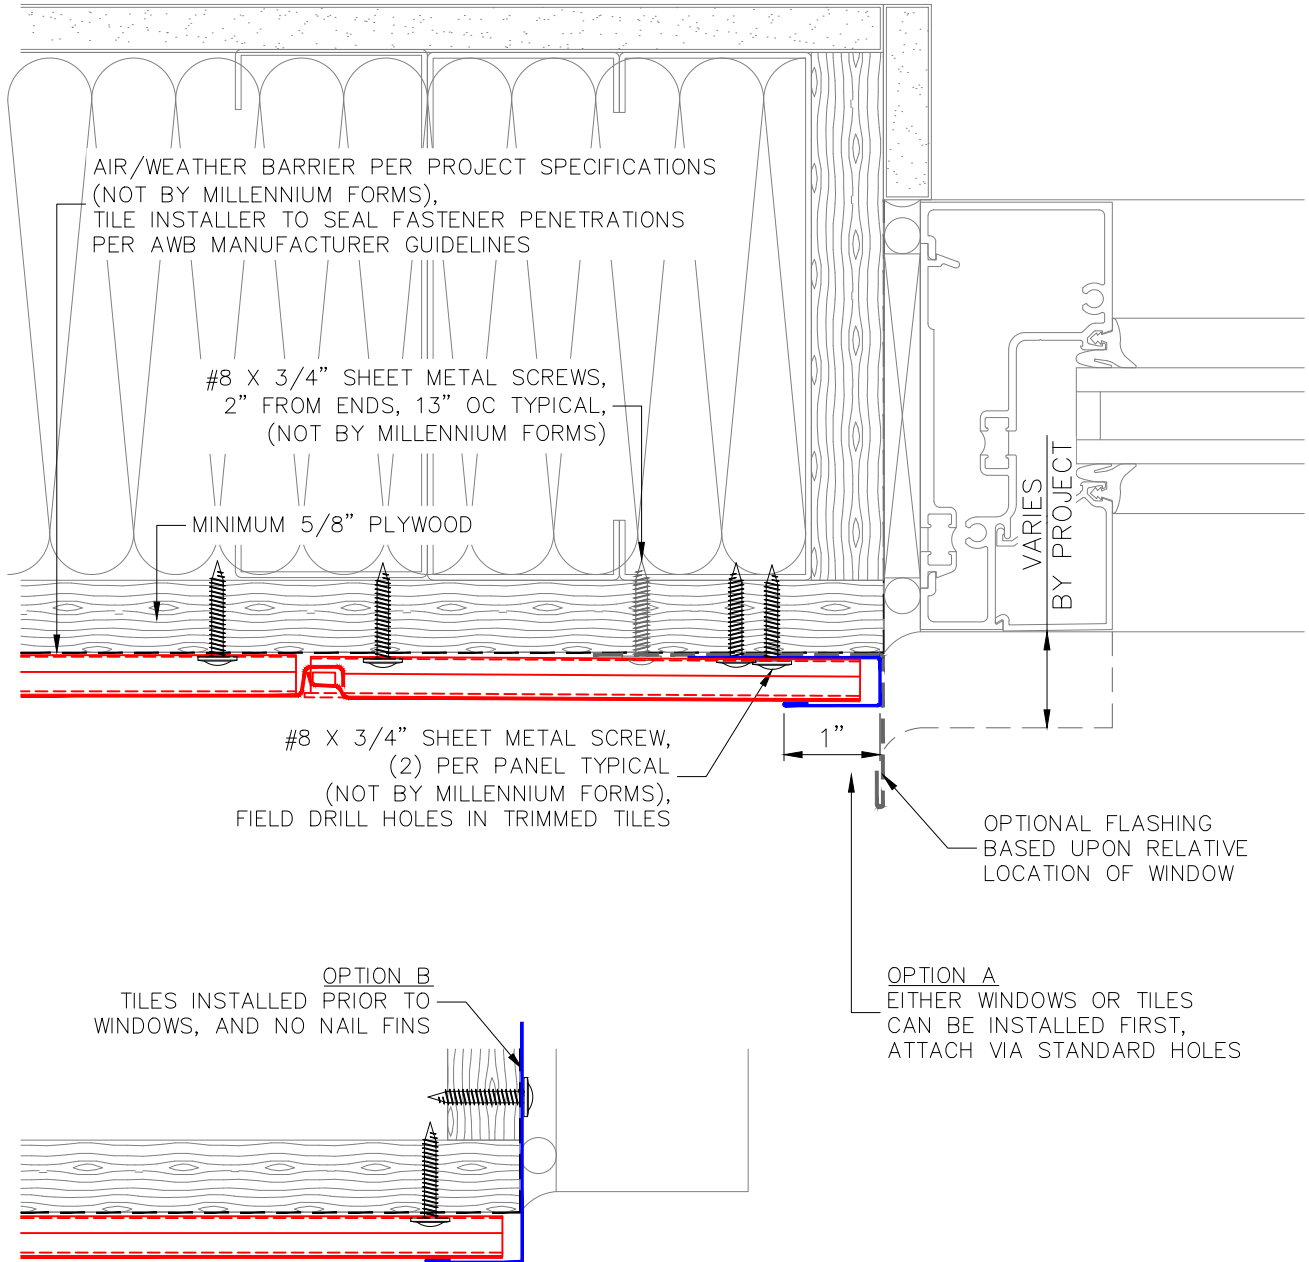

10

WINDOW JAMB TRIM - LEFT


STAMPED TILE - HORIZONTALLY ON PLYWOOD

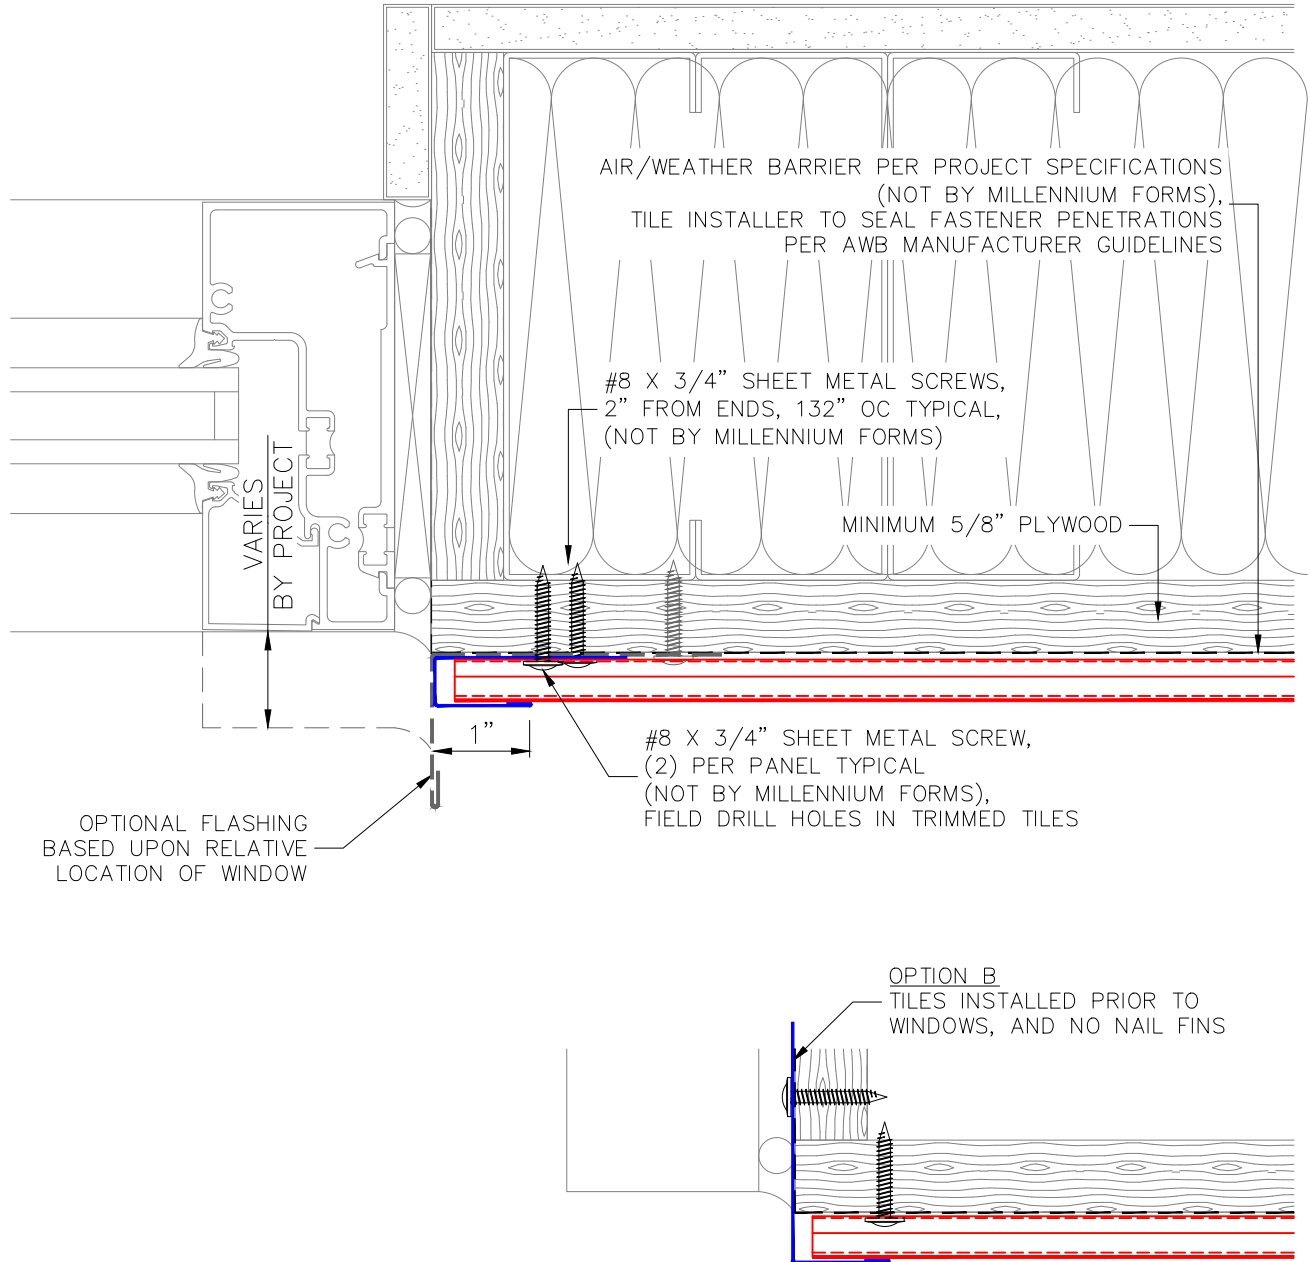

11

WINDOW JAMB TRIM - RIGHT

STAMPED TILE - HORIZONTALLY ON PLYWOOD

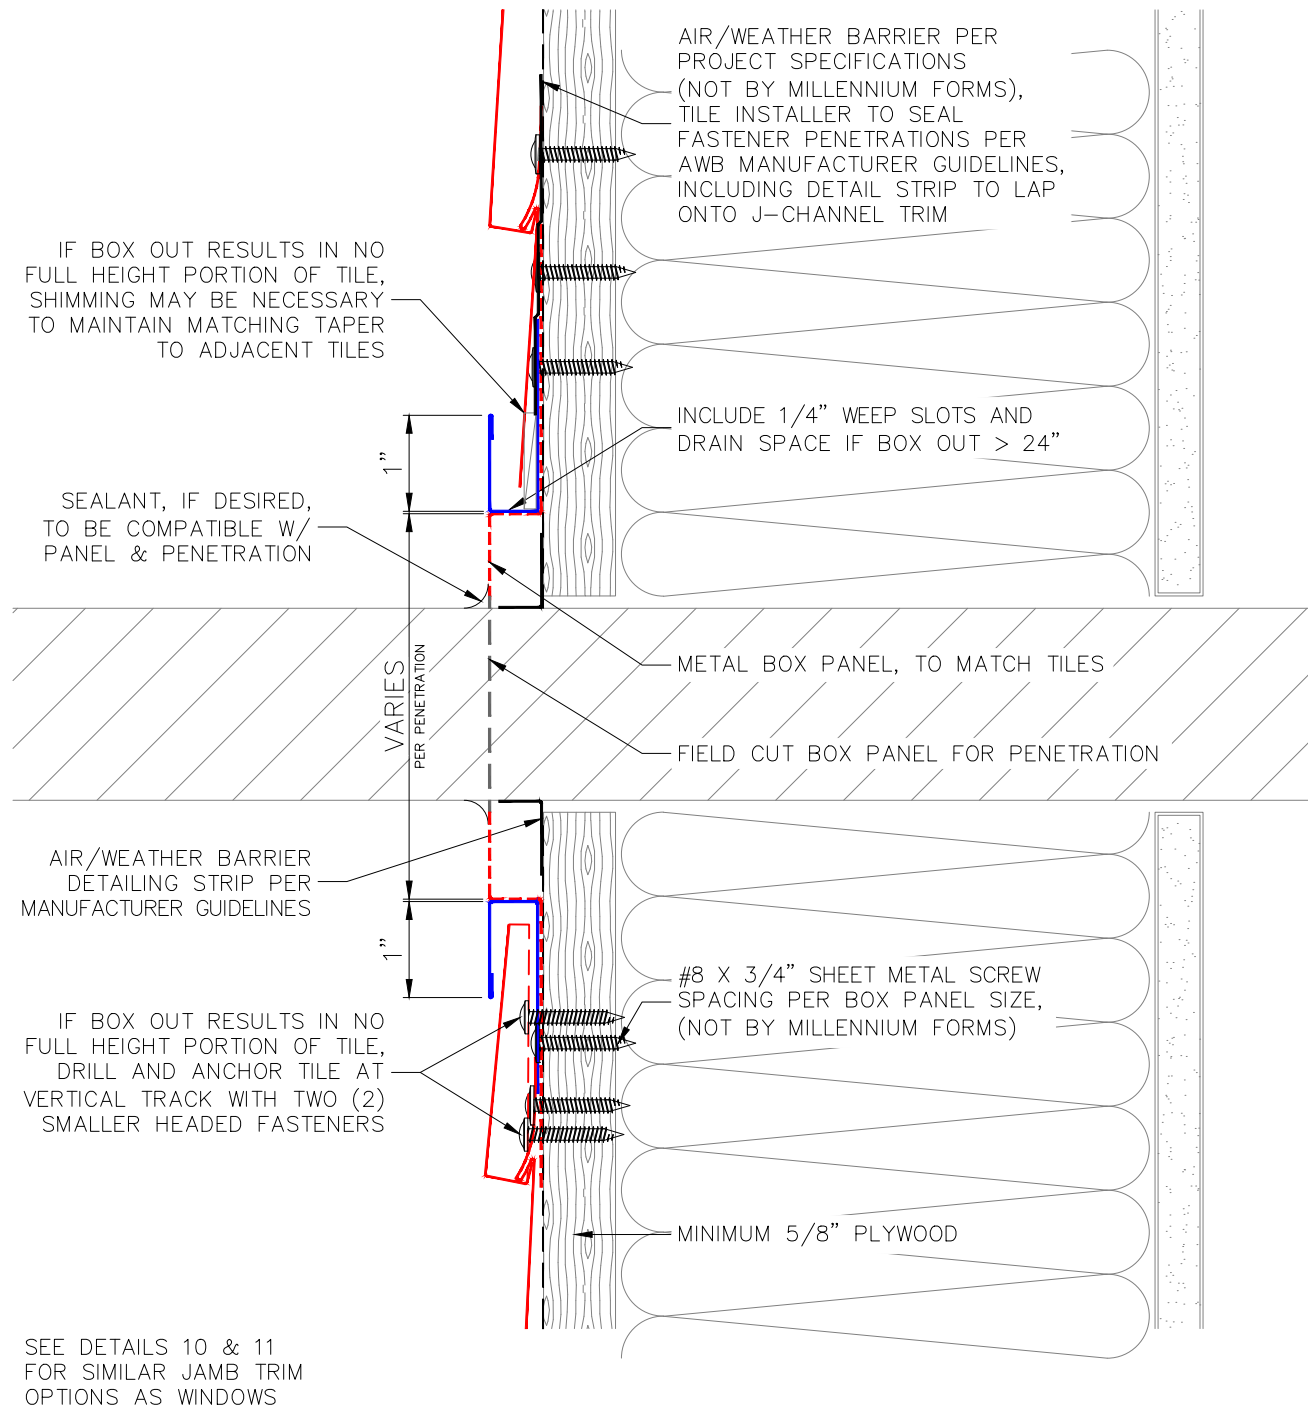

12

**WALL PENETRATION TRIM**

STAMPED TILE - HORIZONTALLY ON PLYWOOD